



Motorola Moto X Style(Moto X Pure Edition) Teardown

Illustration here shows how to do Motorola Moto X Style/Moto X Pure Edition complete teardown/disassembly.

Written By: Eric



INTRODUCTION

[video: <https://www.youtube.com/watch?v=bCDq7q4fTt4>]



TOOLS:

- [Heat Gun](#) (1)
 - [Motorola Eject pin](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
 - [T3 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Motorola Moto X Style(Moto X Pure Edition) Teardown



- Remove SIM card tray

Step 2



- Insert eject pin to the small hole to open a gap.
- ☒ You can use heat gun/hair dryer to heat up the rear cover and help adhesive melting.
- Use guitar picks to cut the strong adhesive underneath this rear cover.
- Remove back cover.

Step 3



- Use T3 Torx screwdriver to twist off all 21 screws.
- Remove 2 protective rubbers securing the flashlight flex and battery flex connector.

Step 4



- Release the flashlight flex and battery flex connector.

Step 5




- Remove metal bar securing side buttons, careful of the extremely tiny springs that provide pressure from the frame to the buttons, then be free to remove side buttons.
- Remove middle frame bezel.

Step 6



- Pull out 2 battery sticker strips.
- Loosen the NFC flex connector attached to the battery.
- Pry up and remove battery.

Step 7

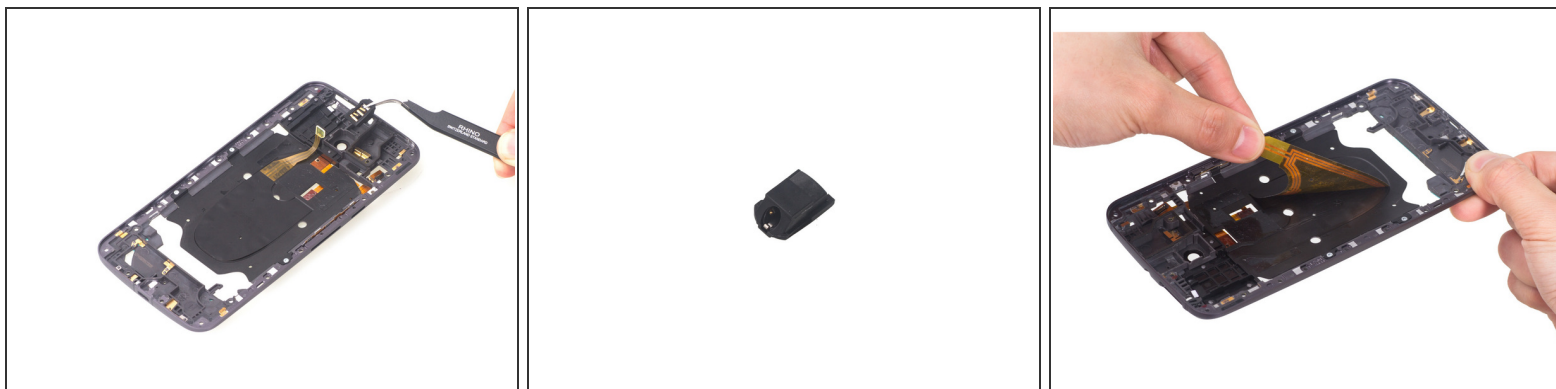


- There is no adhesive sticking headphone jack, just use tweezers to remove it.
- Then peel off the NFC antenna.

Step 8



- Release flashlight flex connector connecting side button flex.
- Take away flashlight flex.

Step 9

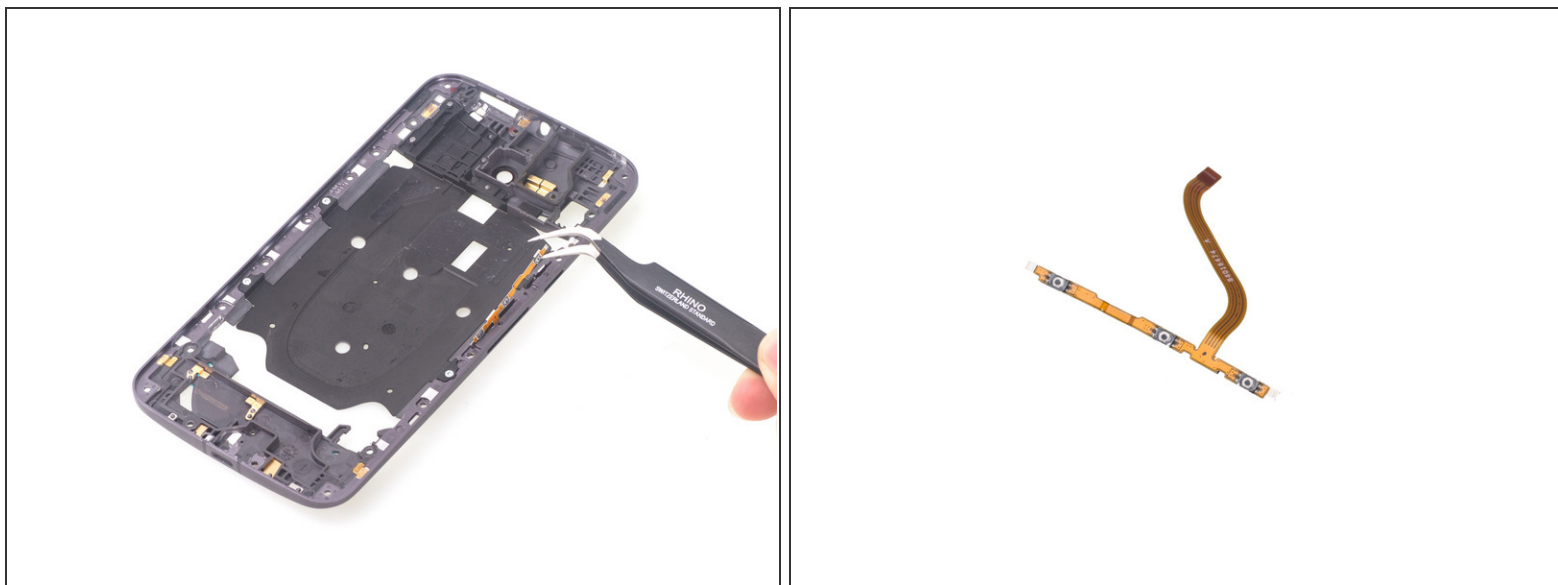

- Pry up and remove power&volume button flex.

Step 10





- Twist off one Torx T3 screw securing motherboard.
- Release the digitizer screen connector here.

Step 11




- Release this LCD connector.
- Separate motherboard assembly from LCD screen assembly.

Step 12

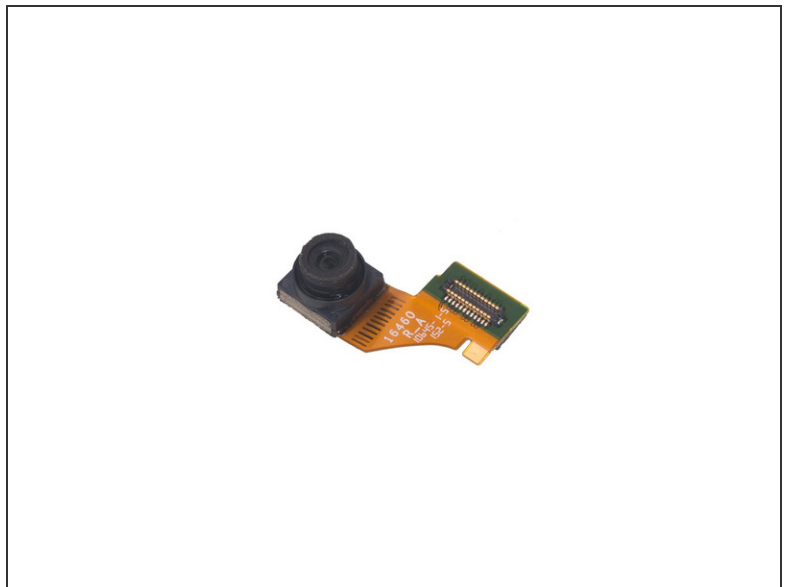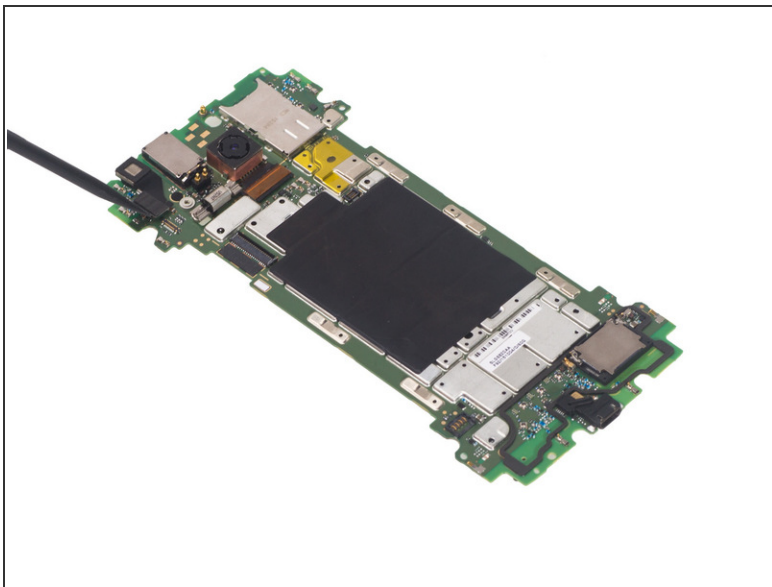




- Release front camera flex and remove it.

Step 13

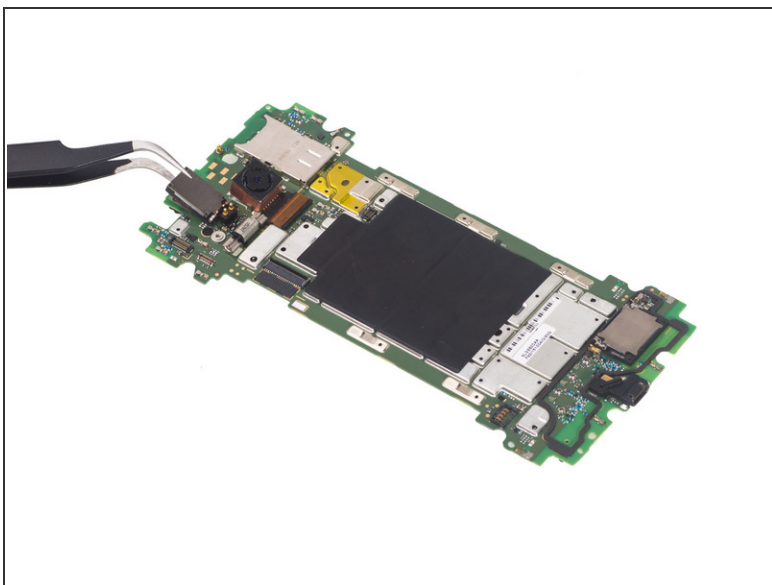

- There is adhesive underneath. Pry up and then remove top speaker.

Step 14

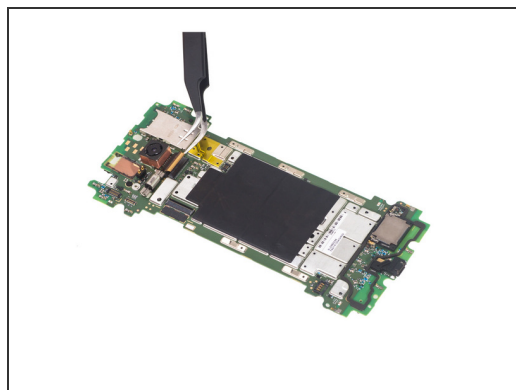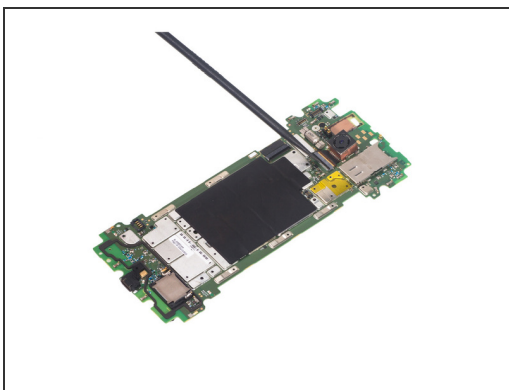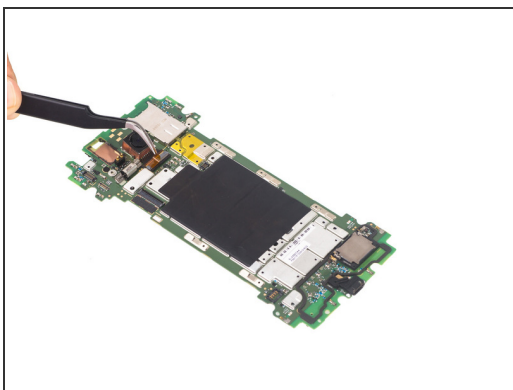

- Peel off protective tape on the rear camera.
- Release rear camera flex and then remove the camera.

Step 15



- Pry up and remove loudspeaker.
- Now it leaves the motherboard assembly with some parts like charging port and vibration motor.

Step 16



- Remove the LCD shield easily.
 - Finally it leaves the LCD screen with digitizer and front housing.
- i** It is better to replace Moto X Style LCD screen and digitizer assembly and front housing together, if you have no confidence to remove it without breaking the screen during the repair work.